


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: **2000** LBS. TRAILER WEIGHT & **200** LBS. TONGUE WEIGHT.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

PARTS LIST/LISTE DE PIÈCES

Num	QTY	DESCRIPTION	Num	QTY	DESCRIPTION
1	3	LOCK WASHER 1/2	7	2	FRAT GROS NUT CENTRÉ
2	3	FLAT WASHER 1/2	8	1	FLAT GROS NUT DECENTRÉ
3	3	HEX BOLT M12 X 40 X 1.75	9		
4	2	HEX BOLT 8 X 45 X 1.25	10		
5	2	LOCK WASHER 5/16	11		
6	2	FLAT WASHER 5/16	12		FILAGE SUGGÉRÉ / WIRING: 119190

PRECISION A VENIR

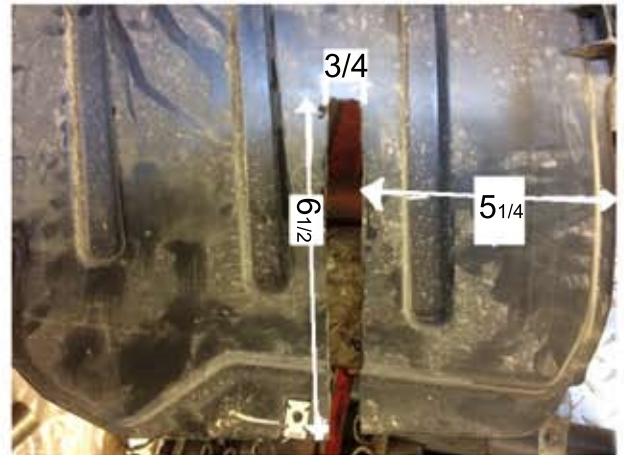

INSTALLATION :

- RETIRER LE PLASTIQUE PROTECTEUR SOUS LA VOITURE.
À L'EXTRÉMITÉ DU CHASSIS COTÉ PASSAGER, INSERER LE FLAT AVEC NUT DÉCENTRÉ VERS LE 3 IEME TROU DU CHASSIS VERS L'AVANT PUIS, INSERER UN FLAT AVEC NUT CENTRÉ AU TROU À L'EXTREMITÉ DU CHASSIS.
- DÉVISSER LES DEUX BOULONS 8 MM DU COTÉ CONDUCTEUR SOUS LE PARE-CHOC DE MÉTAL.
- COTÉ CONDUCTEUR, COUPER LE COIN OU PLIER LE PROTECTEUR DU SILENCIEUX ET INSÉRER UN FLAT AVEC NUT CENTRÉ ET BOULONNEZ.
- VISSEZ L'ATTACHE AVEC LES BOULONS PLUS LONG 8MM X 45 MM X 1.25 DU COTÉ CONDUCTEUR, VISSEZ À L'AIDE DES BOULONS 12 X 1.75 X 40MM DU CÔTÉ PASSAGER
- DÉCOUPEZ LE PROTECTEUR TEL QUE INDIQUÉ SUR IMAGE

SRG trailer hitches., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, SRG trailer hitches Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. SRG trailer hitches Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.