


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: **2000** LBS. TRAILER WEIGHT & **200** LBS. TONGUE WEIGHT.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

PARTS LIST/LISTE DE PIÉCES

Num	QTY	DESCRIPTION	Num	QTY	DESCRIPTION
1	3	LOCK WASHER M10	7	1	FLAT WASHER 1/2
2	2	HEX NUT M10	8	1	HEX BOLT M12X50
3	3	FLAT WASHER 3/8	9	1	FLAT DÉCRNTRÉ p.n. broche 6"
4	3	HEX BOLT M10X40	10	2	FLAT CARRÉ 3"
5	1	LOCK WASHER 1/2	11	1	FLAT ROUND NOIR 1.5"
6	1	HEX NUT M12X1.75	12		FILAGE SUGGÉRÉ / WIRING: 119190

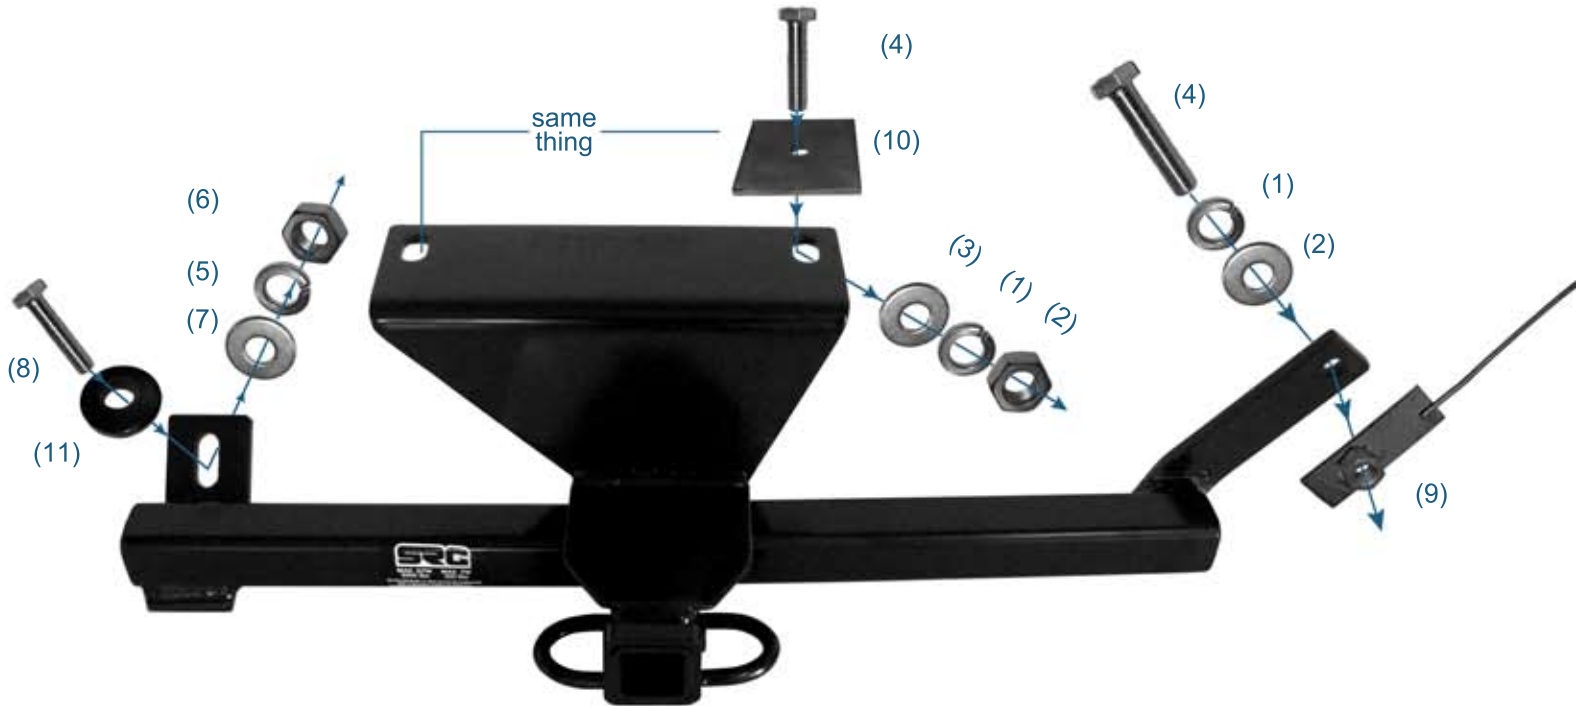

INSTALLATION :

- Retirer la roue de secours puis mettre en appuis l'attache au fond de valise et au crochet de remorquage.
- Reliez le côté droit au pare-choc interne au trou. Il se peut que le plastique bloque le trou, alors, dégagez le trou. Serrez le tout solidement.
- Remove the spare tire and to support the hitch to the suitcase bottom and to the tow hook.
- Connect the right side to the internal bumper to the hole.
- It is possible that the plastic blocks the hole, clear the hole.
- Tighten well

SRG trailer hitches., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, SRG trailer hitches Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. SRG trailer hitches Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.