


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: **2000** LBS. TRAILER WEIGHT & **200** LBS. TONGUE WEIGHT.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

PARTS LIST/LISTE DE PIÈCES

Num	QTY	DESCRIPTION	Num	QTY	DESCRIPTION
1	2	LOCK WASHER M10	7	1	HEX BOLT M12 X 1.75
2	2	HEX NUT M10	8	5	FLAT WASHER 1/2
3	2	BOLT M10 -1.5 X 30	9	2	UBOLT 3X4 with NUT
4	4	FLAT WASHER 3/8	10		
5	5	LOCK WASHER 1/2	11		
6	1	HEX NUT M12 X 1.75	12		FILAGE SUGGÉRÉ / WIRING: 119190

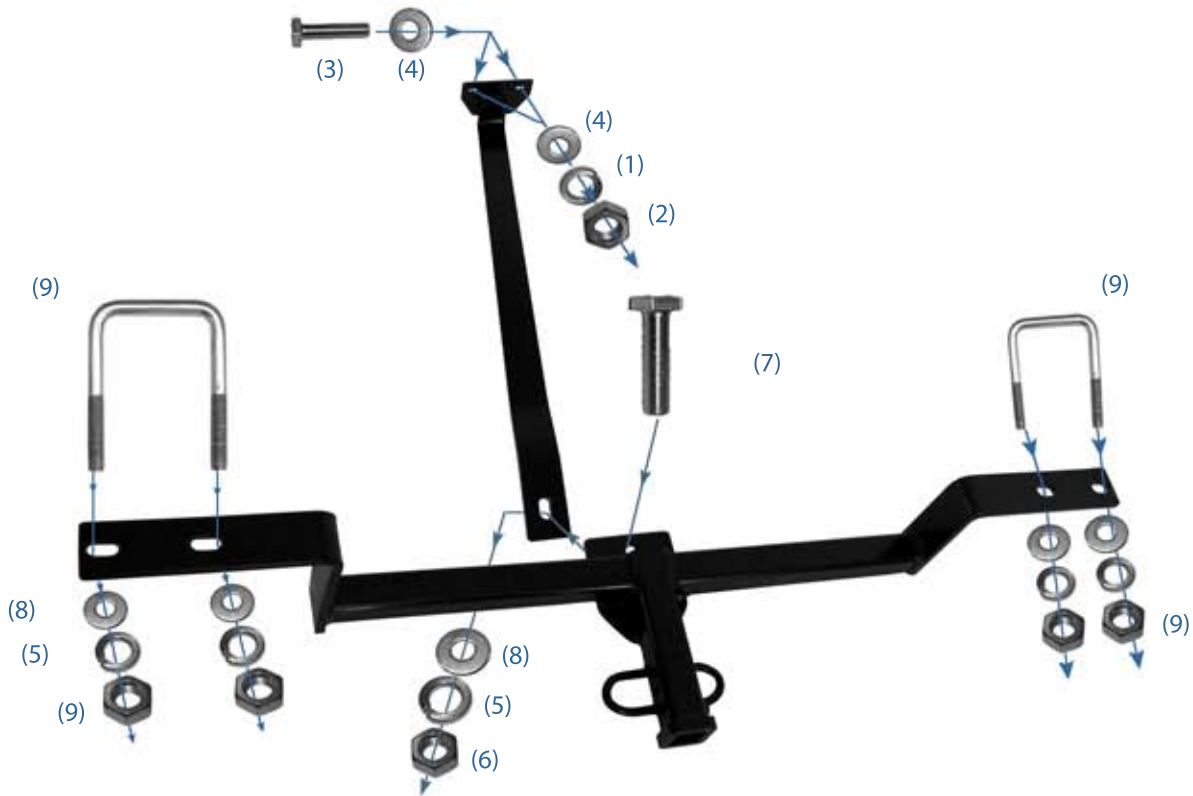

INSTALLATION :

- Dévissez les deux boulons de chaque côté du centre du pare-choc. Dévissez les boulons du silencieux.
- Insérez les UBOLTS aux extrémités du châssis sur le bout des poutres carrées
- Placez l'attache en écartant les fixations du pare-choc. Reliez aux UBOLTS à l'attache
- Avant de serrer les UBOLTS, insérer les boulons 12X1.75X40 dans le trou arrière
- Reliez la pièce arrière à la barre transversale de l'essuie aux trous existants (Aggrandir 1/16)
- Serrez les tout solidement
 - Remove the two bolts on each side of the bumper center
 - Unscrew the bolts from the muffler
 - Insert UBOLTS to extremities of the frame to the back of square beams
 - Place the hitch and spread the bumper fasteners. Link UBOLTS with the hitch.
 - Before to tighten the UBOLTS, insert the bolts 12X1.75X40 in the back hole.
 - Link the back part to the axel crossbar.
 - Tighten well

SRG trailer hitches., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, SRG trailer hitches Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. SRG trailer hitches Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.