


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: **2000** LBS. TRAILER WEIGHT & **200** LBS. TONGUE WEIGHT.  
**\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\***

PARTS LIST/LISTE DE PIÈCES

Num	QTY	DESCRIPTION	Num	QTY	DESCRIPTION
1	8	LOCK WASHER 5/16	7	4	HEX NUT M10 X 1.5
2	8	FLAT WASHER 5/16	8	8	FLAT WASHER 3/8
3	4	HEX BOLT 8 X 45 X 1.25	9	4	HEX BOLT M10 X 40 X 1.5
4	4	HEX NUT 8 X 1.25	10	2	LOCK WASHER 1/2
5	6	FLAT WASHER 1/2	11	2	HEX BOLT M 12 X 50 X 1.75
6	4	LOCK WASHER 7/16	12	2	FLAT GROSSE NUT DECENTRÉ

FILAGE SUGGÉRÉ / WIRING: 119147

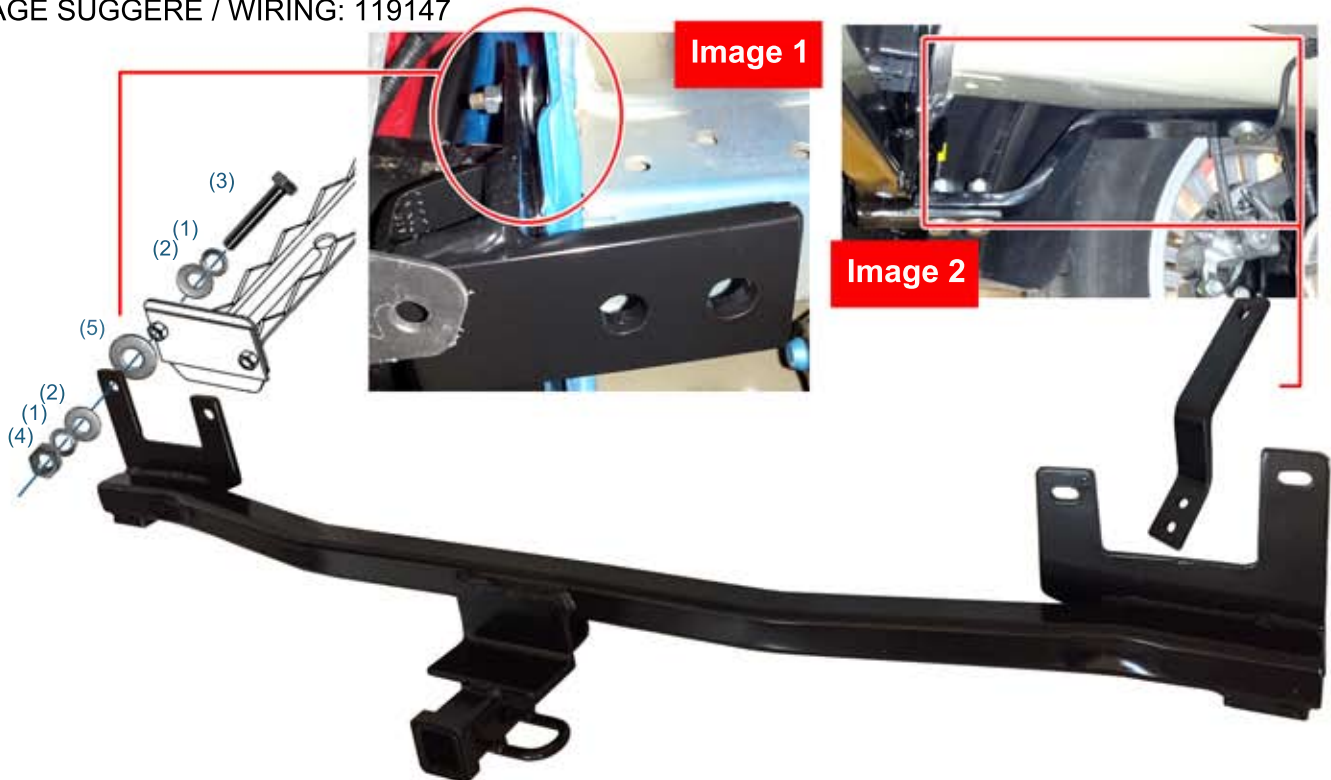

### INSTALLATION :

- ABAISSER LE SILENCIEUX
- RETIRER LES BOULONS DE CHAQUE COTÉ DU PARE-CHOC (INNER BUMPER)
- ET LES REMPLACER PAR LES BOULON M8 X 1.25 X 45
- EN LES CHANGEANT 1 A LA FOIS
- PLACER LE GROS FLAT ROND CHROMÉ DU COTÉ PARE CHOC (VOIRE IMAGE 1)
- INSTALLER L'ATTACHE EN L'INSERANT AUX EXTRÉMITÉS DES BOULONS
- PLACER ENSUITE UNE RONDELLE , UN LOCK WASHER ET UN ÉCROU POUR BOULONNER L'ATTACHE.
- DEVISSER L'ÉCROU DU SYSTÈME D'ESSIEU ET RELIER LA PLAQUE TEL QUE DÉCRIT
- SERRER LE TOUT SOLIDEMENT.
- INSERER LE FLAT NUT À L'INTERIEUR DU CHASSIS À L'ENDROIT INDIQUER ET RELIER À L'AIDE DES BOULONS M 12 X 1.75 X 50 (IMAGE 2)

SRG trailer hitches., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, SRG trailer hitches Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. SRG trailer hitches Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.